


European and Worldwide Plumbing Arrangements




I. SET UP


Cut the waste pipe ends to length ensuring they remain long enough to reach the waste containers below.

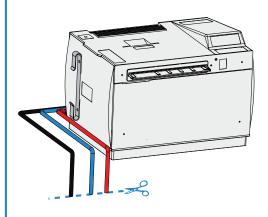

2. DRAIN

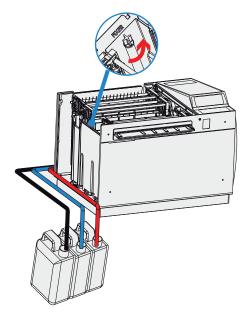


3. STORE

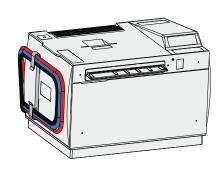


B

I. SET UP

Alternatively, connect the straight end of the pipes to the machine and pass through the pre drilled holes in the work surface. The waste pipes can then be placed in the waste containers under the cupboard area.

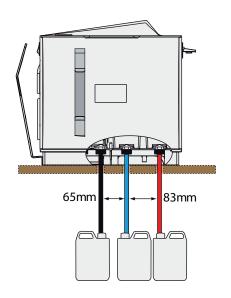

2. DRAIN

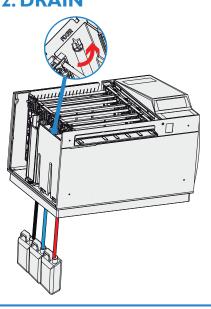

Extra XE Plumbing Worldwide Iss. I I/LIT0161P Issued 30/09/10

